



How To Update The Firmware

1. Please connect your printer with your PC with a USB cable.

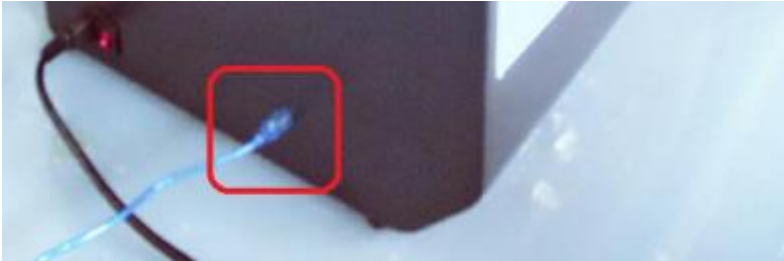

2. Please open **IntamSuite**, and choose “Setting” → “Printers” → “Upgrade Firmware”.

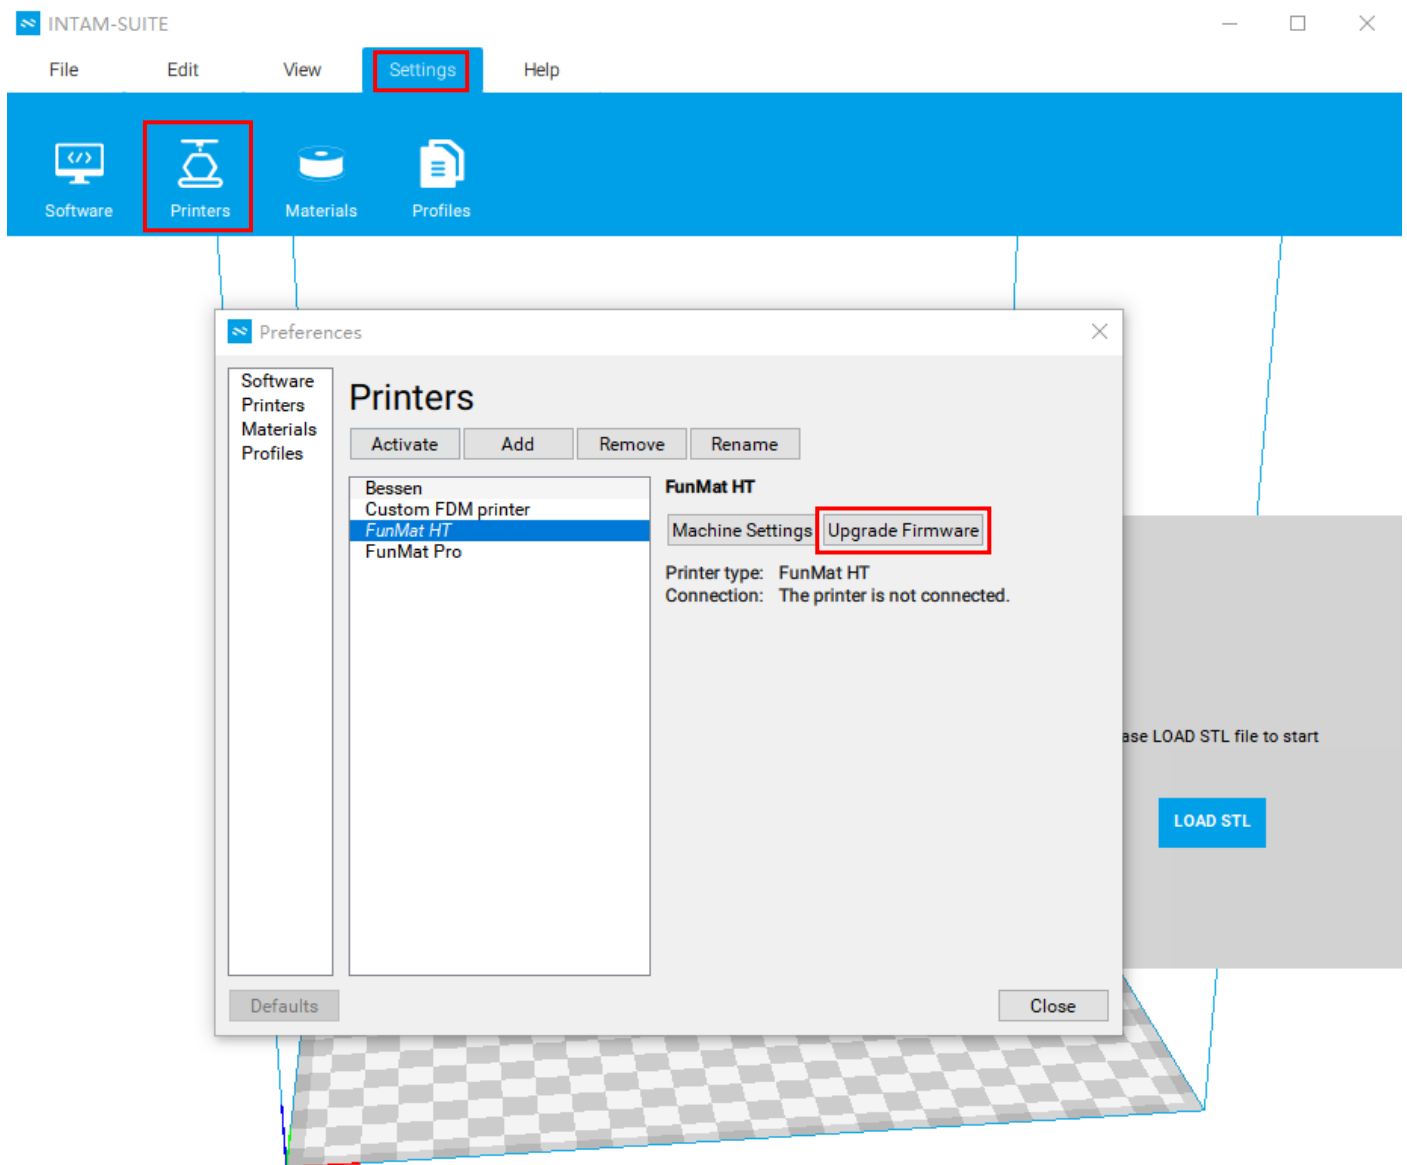

INTAMSYS

3. Select the new firmware and wait until downloading finished.